

Exhibition Park Barn & Stables Fire Safety Guideline

- It is the livestock owner's responsibility to have an attendant(s) present at all times in the barns & stables for the care of their animals. However, **stables and barns are not to be used as living quarters.**
- **Smoking is strictly prohibited inside all buildings, barns and stables!!!** Smoking is only permitted outside and at a distance of 8 metres from buildings and entrances.
- **No open flame** is permitted in the barns or stable area at any time!!
- Portable heaters are **not** permitted.
- **No** electrical wiring or electrical apparatus will be installed at anytime without permission from Exhibition Park Management.
- **Extension cords are not to be used** (unless approved by Exhibition Park Management) and they must be unplugged after every use.
- Extensions cords **must** be heavy duty outside rated & be ULC /CSA approved and **not** be taped, spliced, cut, excessively coiled or have any alterations or damage of any kind. They must also be the appropriate cord for the equipment being used.
- Agricultural electrical equipment/appliances (**no household appliances permitted**) are to be kept to a minimum and must be monitored at all times when in use and unplugged after each use. All equipment must be in good working order, CSA or ULC approved, not be damaged or altered in any way and approved by Exhibition Park Management.
- **All circulation fans** brought into the building **must** be CSA or ULC approved for hazardous atmospheres. Motors must be fully encased (House and furnace fans are **not** permitted)
- Only a daily amount of hay, straw, sawdust and feed is permitted in the barn or stables - **no stockpiling within the building.**

- Doors, fire extinguishers, pull stations and other safety equipment are **not to be blocked at anytime for any reason.**
- Aisles are to be kept clear of equipment at all times. (Keep stall doors closed)
- Horses (large livestock) will wear halters while in the stalls overnight.
- After hours, visitors to the barns & stables will be restricted to owners and livestock attendants only.
- **No** gas or diesel powered vehicles or equipment are permitted in the barn or stable areas without permission from Exhibition Park Management.
- **No** flammable materials will be stored inside the barn or stable area.
- Familiarize yourself with both main and alternate exit routes.
- All large livestock taken out of the building during an emergency will be assembled in the former auto-track area. Please see Exhibition Park staff for the exact location.

Lets work Together for Safety!!

Please report Any Hazards to Exhibition Park Staff Immediately!! This can be done by alerting the Safety Officer, Ushers or Ex Park Staff.

The Management Office is located at the main entrance of the arena or by calling the Main Office at 876-1811.

